


The P.V.C. Float (E) riding on the water surface will raise the indicator disk (D) to the highest water level during surcharge. The disk will remain at that level until manually reset.


The S.L.I. can be installed or removed, in most cases, without entering the manhole by screwing the Inserter-Extractor Handle (#45562) into the threaded adapter (A) or by using the Extractor Hook (#45563)

The fully adjustable sleeved hooks (B&C) allow the S.L.I. to be set in manholes with odd spaced or missing steps. The set screw in sleeve (B) allows the S.L.I. to be locked at a desired height.

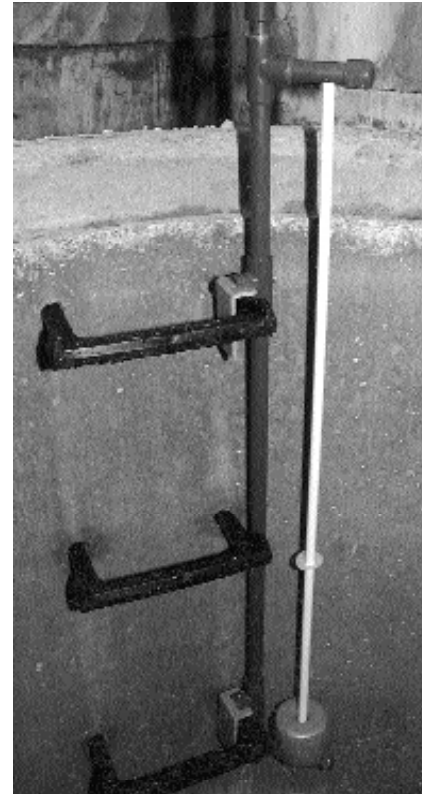

- AVAILABLE IN 4' & 6' LENGTHS
- PVC AND STAINLESS STEEL CONSTRUCTION
- DURABLE, LIGHTWEIGHT, CORROSIVE RESISTANT
- NON BUOYANT DUE TO HOLLOW CONSTRUCTION
- WILL NOT OBSTRUCT MANHOLE ENTRY
- CAN BE INSTALLED OR REMOVED, IN MOST CASES, WITHOUT MANHOLE ENTRY

SURCHARGE LEVEL INDICATOR ACCESSORIES

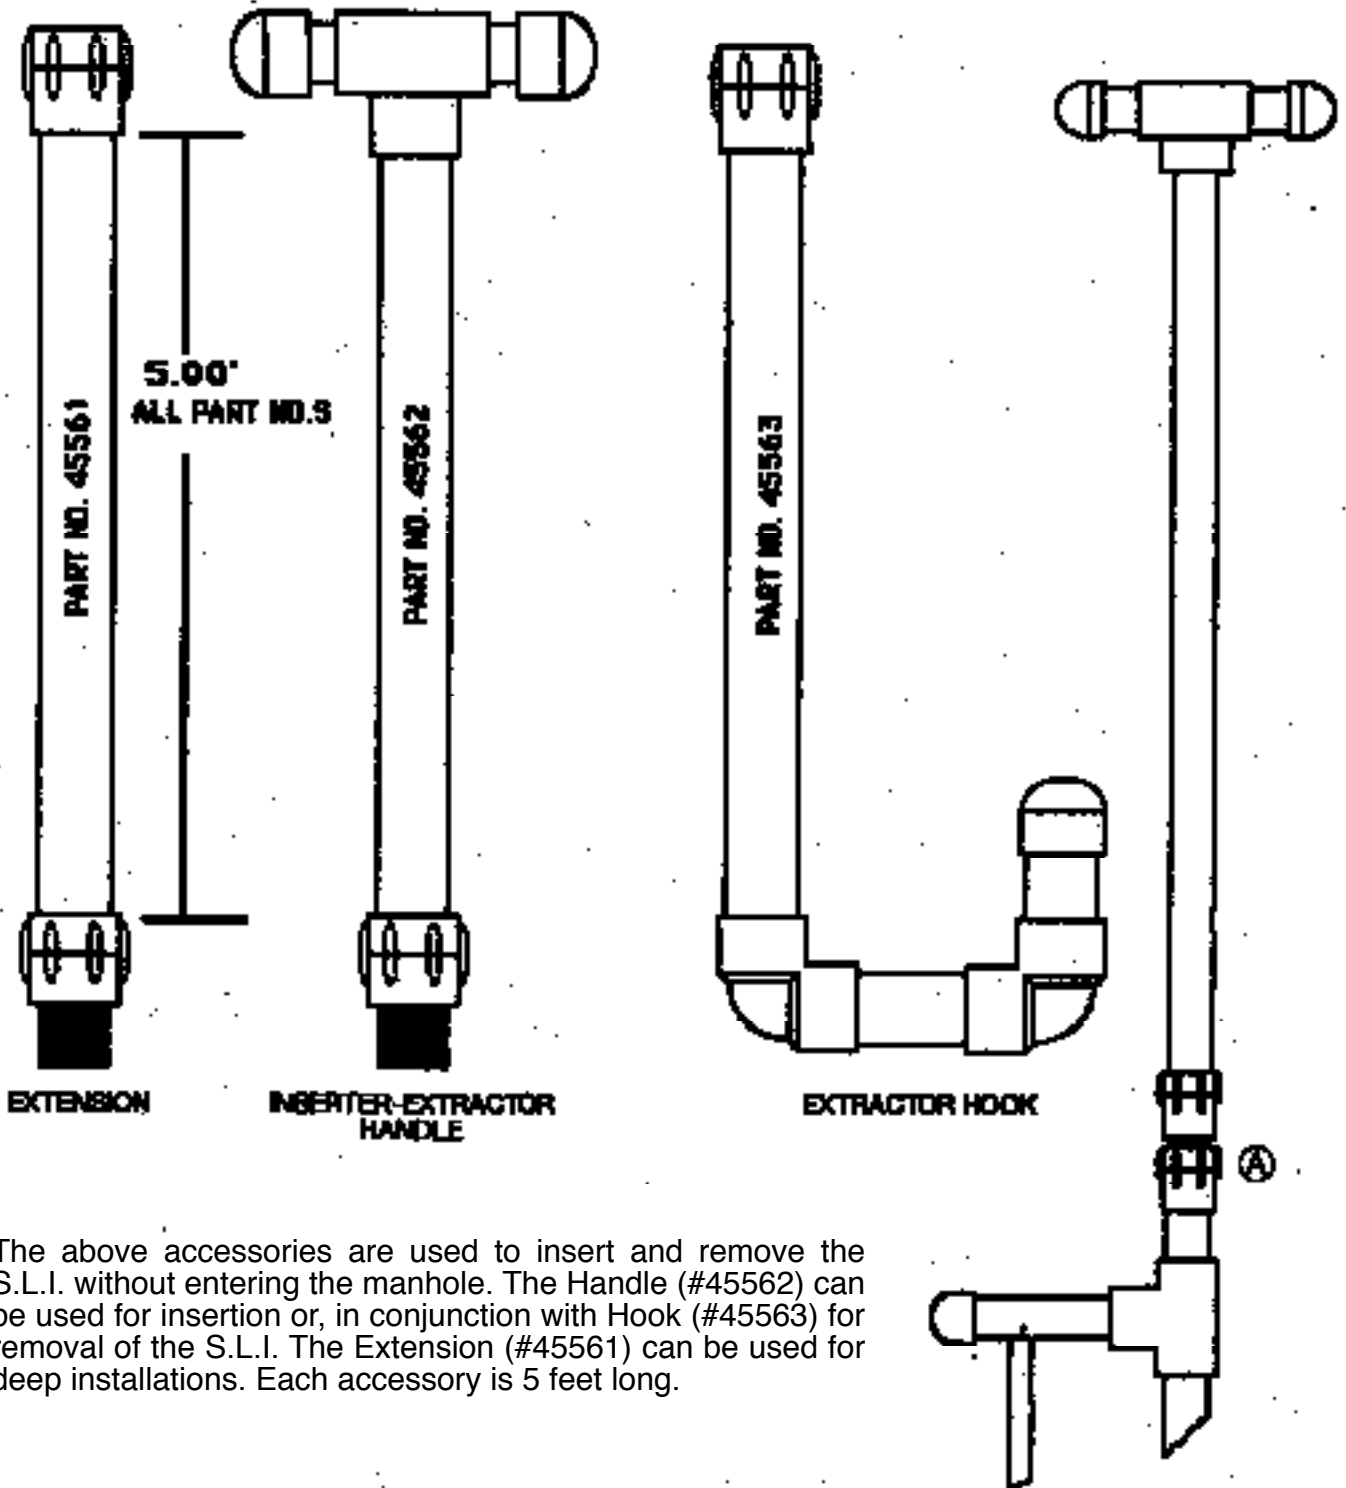

The above accessories are used to insert and remove the S.L.I. without entering the manhole. The Handle (#45562) can be used for insertion or, in conjunction with Hook (#45563) for removal of the S.L.I. The Extension (#45561) can be used for deep installations. Each accessory is 5 feet long.